



Wizyconf



The first professional easy-to-use web conference



Installation Guide

Package Overview

Box top level - View from the top

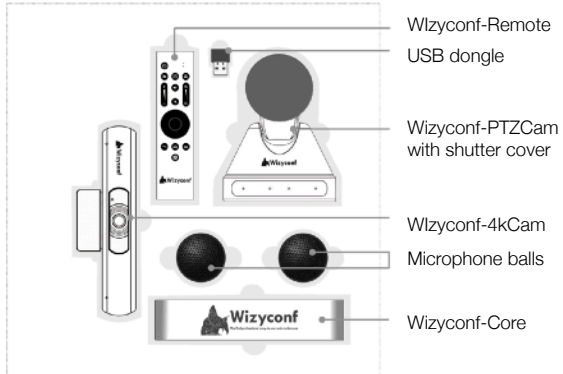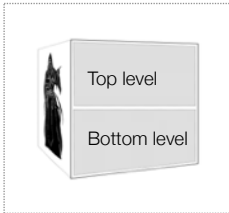


Box bottom level - View from the top


1

Accessories:

- charging adapter for Wizyconf-Remote
- 2 soft, 4 rigid cables for Wizyconf-Mics
- 2 x 4 screws for mounting Wizyconf-Mics
- 1 screw for mounting Wizyconf-PTZCam
- 2 USB cables for Wizyconf-PTZCam and Wizyconf-4kCam
- power supply for Wizyconf-Array
- 8 support legs for Wizyconf-Mics
- 4 support legs for Wizyconf-Array

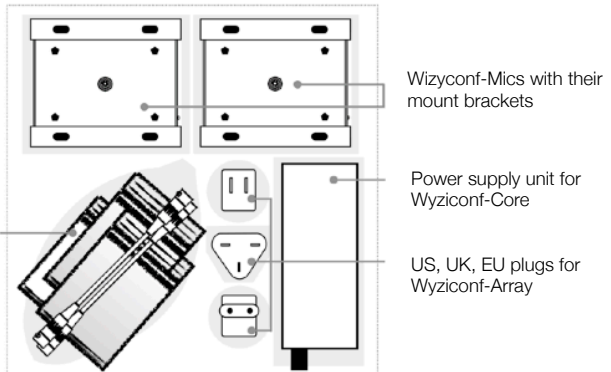

2

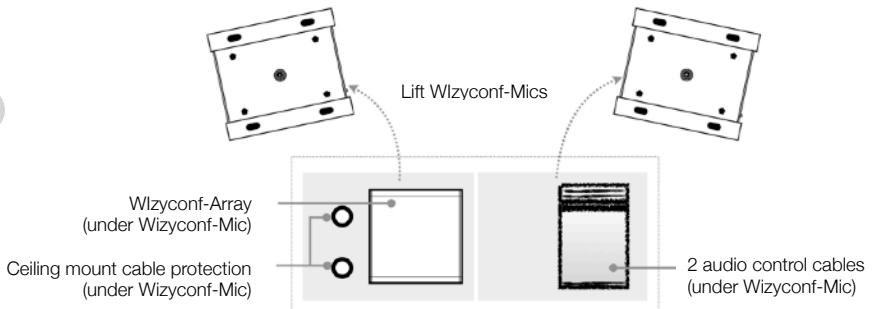

Packing list

Wizyconf-Mic x 2 & Wizyconf-Array

- 2 x microphone ball
- 1 x Wizyconf-Array box
- 2 x mount bracket
- 2 x ceiling mount cable protection
- 2 x Wizyconf-Mic box
- 1 x power supply with US, UK, EU plugs
- 2 x audio control cable
- 2 x rigid cable (50cm)
- 2 x rigid cable (20cm)
- 2 x soft cable (53cm)
- 2 x 4 screws for mounting
- 1 x package of 4 support legs for Wizyconf-Array
- 1 x package of 8 support legs for Wizyconf-Mics

Wizyconf-4kCam

- 1 x 4K webcam
- 1 x USB cable

Wizyconf-PTZCam

- 1 x PTZ webcam
- 1 x USB cable
- 1 x shutter cover
- 1 x screw for mounting

Wizyconf-Core

- 1 x PC unit
 - 1 x power supply
- Note: power cord must be purchased separately*

Wizyconf-Remote


- 1 x remote control unit
- 1 x USB to micro USB charging adapter (1m)
- 1 x remote USB dongle




Wizyconf-Array



Wizyconf-4kCam

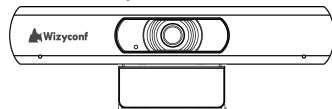

Wizyconf-PTZCam

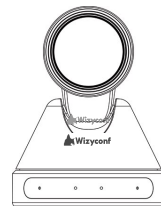

Wizyconf-Core



Wizyconf-Remote




USB dongle



Wizyconf-Core


Wizyconf-Remote

The wireless range in normal conditions is up to 10 meters, it decreases in the presence of many wireless devices

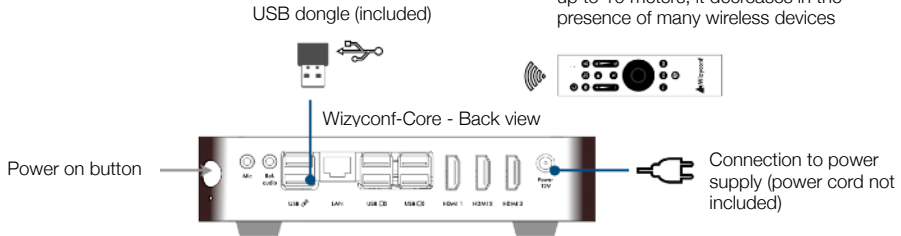




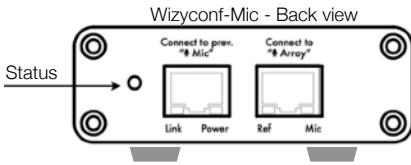
Wizyconf-Mic & Wizyconf-Array

Wizyconf-Array: port definition


Port Name	Description
DC 12V	Connect to the power supply.
Mic	Microphone analog connection. Connect to Wizyconf-Core using audio control cable.
Ref-audio	Reference audio analog connection. Connect to Wizyconf-Core using audio control cable.
Connect to  "Mic"	Connect to Wizyconf-Mic 1.

Wizyconf- Mic: port definition



Port Name	Description
Status Indicator	Steady red: system starting. Steady green: clock synchronization (takes 10-30 seconds). Flashing green: clock synchronization finished; working status.
Connect to  "Array"	Connect to the Wizyconf-Array.
Connect to next  "Mic"	Wizyconf-Mic 1 only: connect to Wizyconf-Mic 2.
Connect to prev.  "Mic"	Wizyconf-Mic 2 only: connect to Wizyconf-Mic 1.



Wizyconf-Mic - View from the bottom

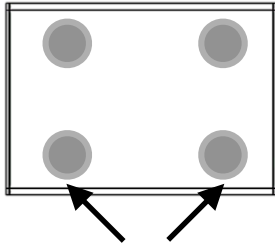


Wizyconf-Mic - View from the top

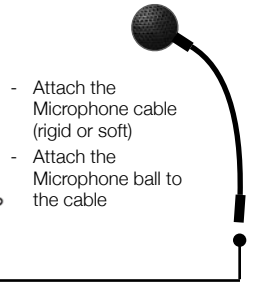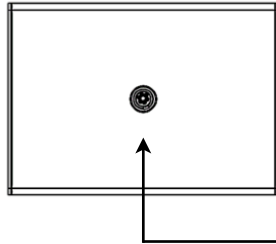

Important! For table installation:
Attach four legs to each Wizyconf-Mic
(package of 8 support legs)

Wizyconf-Array - Front view

Wizyconf-Array - Back view

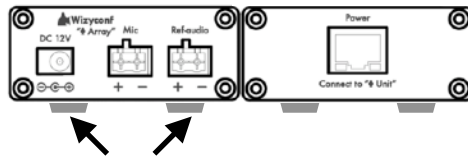


Important! Attach the four legs to Wizyconf-Array (package of 4 support legs)

Audio control cable Ref-audio (included)

Audio control cable Mic (included)


Wizyconf-Core - Back view

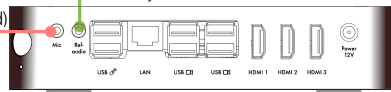

Connection to power supply (power supply and plugs included)

RJ45 cable (not included)

Wizyconf-Mic 1 - Back view

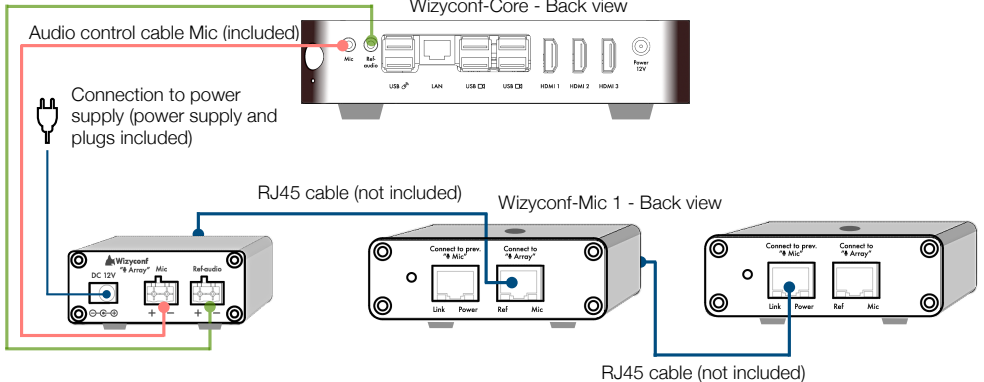


Wizyconf-4kCam & Wizyconf-PTZCam


Wizyconf-Core - Back view



Wizyconf-4kCam - Back view

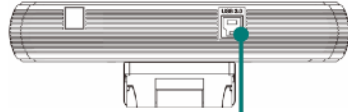

USB cable (included)

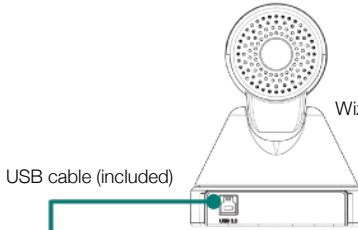


Wizyconf-PTZCam - Back view




USB cable (included)

↑ Fasten Wizyconf-PTZCam on Wizyconf-Stand using the mounting screw
Note: Wizyconf-Stand is optional and free of charge

Wizyconf-Core - Back view

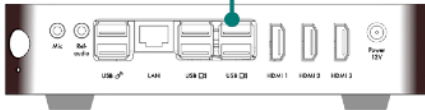

Wizyconf - system connection scheme

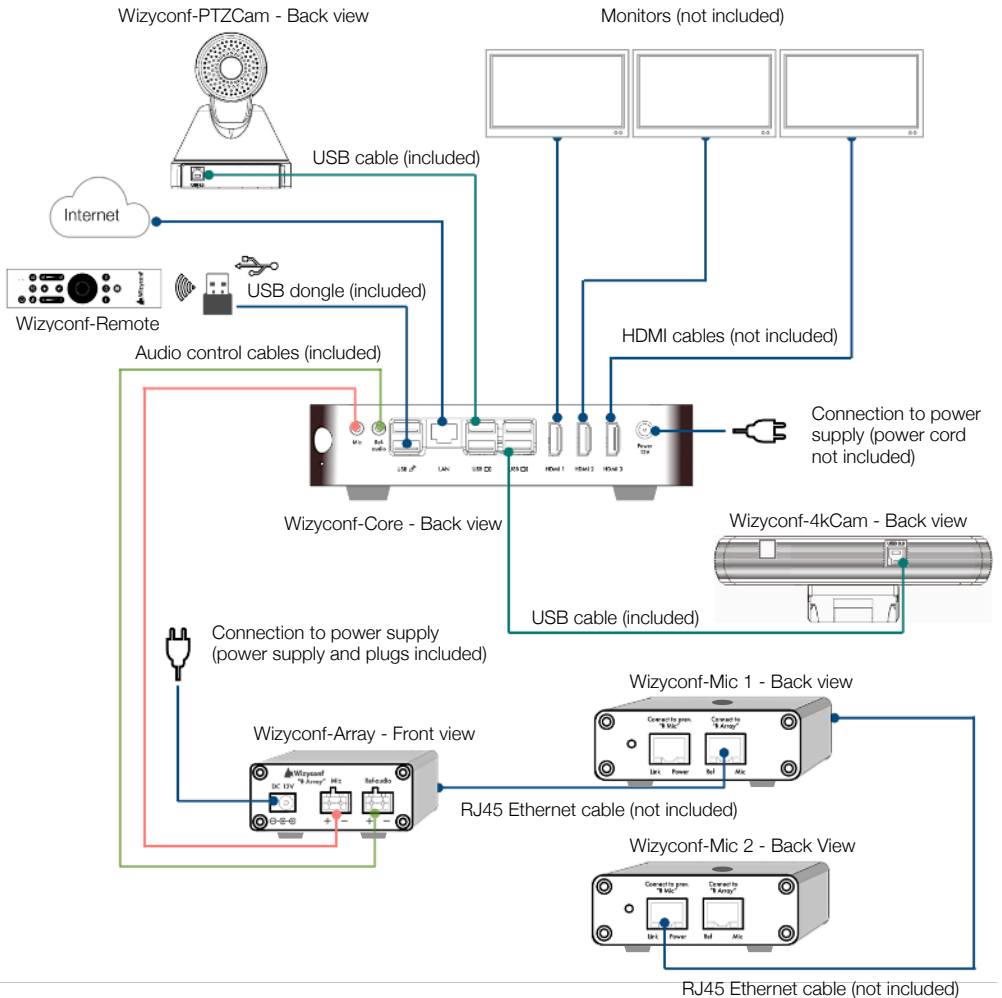

If you ordered Wizyconf-Stand, follow instructions inside the box to assemble the stand.



Refer to the Wildix website www.wildix.com for provisioning instructions.